

### Getting Started

**Power On** - Inserting the Battery (AAA) will turn the pager on. If the battery is in, press and hold the **READ Key** for two seconds. The pager will display the **STANDBY SCREEN**.




**Power Off** - Go to the **STANDBY SCREEN**. Press the **MENU Key** to display the **SETTINGS Menu**. Use the **MENU Key** to scroll through the menu until **PAGER OFF** is found. Press the **READ Key** to confirm your choice.

**Backlight** - Press and hold the **READ Key** to activate or deactivate.

### Read Messages

The pager will display a new message when it is received. To read stored messages, press the **READ Key** from the **STANDBY SCREEN**. Scroll through messages with the **READ Key**. You will be returned to the **STANDBY SCREEN** automatically if you scroll to the end of the message queue. If a message is longer than the screen width, the **READ Key** is used to view the rest of the message.

### Message Display

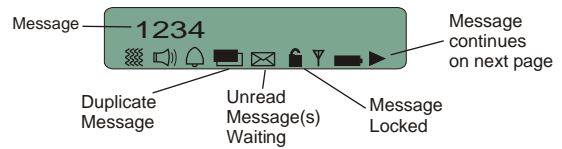

### Delete messages

Whilst message is displayed - Press the **MENU Key** to view the **DELETE MENU Screen**. Using the **MENU Key**, select between **PROTECT** (locks current message), **DELETE** (delete current message) or **DELETE ALL** (delete all stored messages). Select **PROTECT** (locks current message) to prevent the current message from being deleted. Press the **READ Key** to confirm your selection. The **ESCAPE Key** takes you back to the **STANDBY SCREEN**.

### Settings Menu



Press the **MENU Key** to select the **SETTINGS Menu**. Scroll through the menu by pressing the **MENU Key**. Press the **READ Key** to confirm your selection. Use the **MENU Key** to modify options. Use the **READ Key** to move to the next option. To save changes and return to the **STANDBY SCREEN**, press the **READ Key** until the end of the line is reached.

The **ESCAPE Key** takes you back to the **STANDBY SCREEN** without saving changes.