


# PD662 User Guide

## Quick Reference

### Radio Guide for

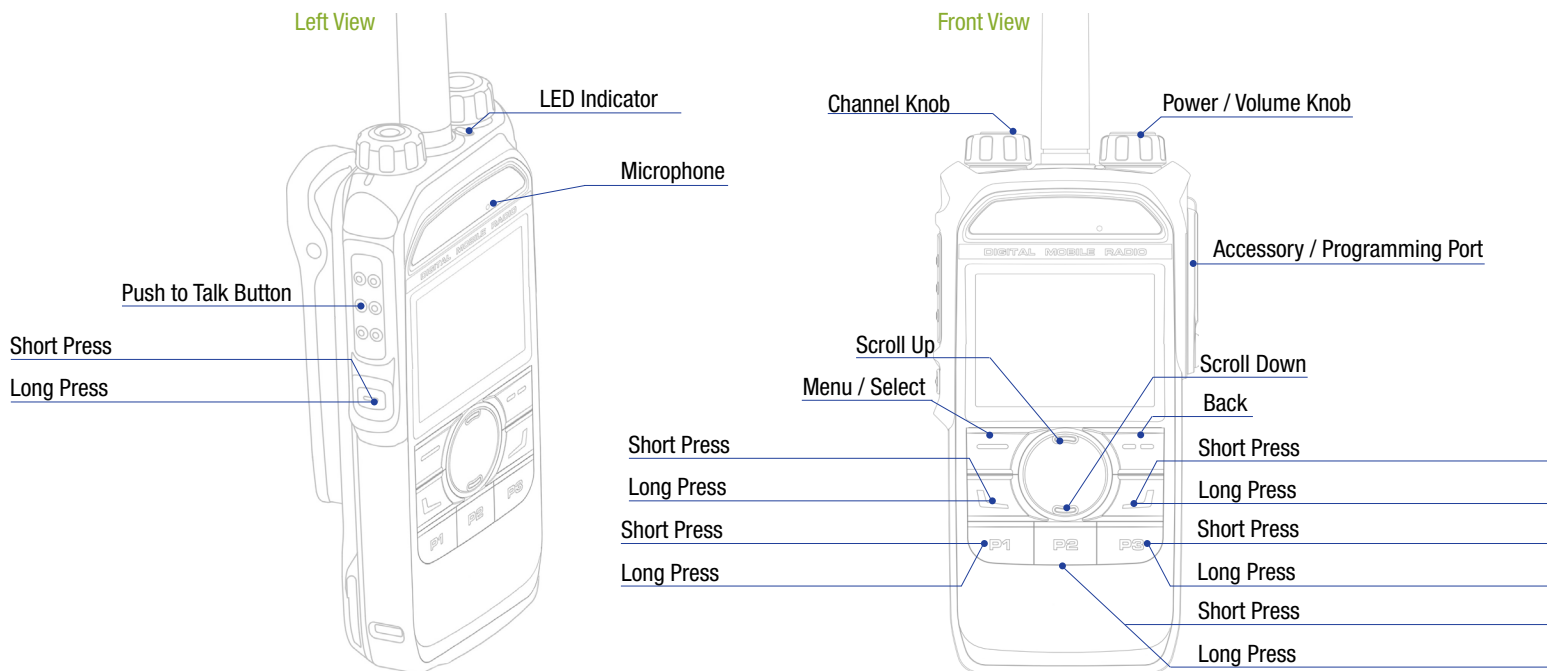

Radio Operation	
<p><b>Charging the Radio</b></p> <ul style="list-style-type: none"> <li>• Please ensure the radio is off when charging</li> <li>• Charging while the radio is on shortens the lifespan of your battery</li> <li>• Full charge may take up to 3 hours</li> <li>• The radio should be placed in the charger with the screen (front of radio) facing the front of the charger.</li> </ul>	<p><b>Turning the Radio On</b></p> <ul style="list-style-type: none"> <li>• Rotate the on / off volume knob to power on &amp; set the volume</li> <li>• If the radio is tuned to a non-programmed channel it will emit a continuous error tone</li> <li>• Please reference the zone / channel list to select the appropriate channel</li> </ul>
<p><b>Viewing Text Messages</b></p> <ul style="list-style-type: none"> <li>• When the radio receives a text message it will beep, vibrate &amp; display a mail icon</li> <li>• Pressing the select button will allow you to view the message</li> <li>• If multiple messages have been received, pressing the select button will display a list of messages</li> <li>• You can highlight the messages using the scroll button</li> <li>• Pressing the select button again will allow you to view the highlighted message</li> </ul>	<p><b>Sending Text Messages</b></p> <ul style="list-style-type: none"> <li>• To send a text, press the select button to display the menu</li> <li>• Use the scroll button to scroll down to the quick text option &amp; press the select button</li> <li>• This will display the pre-programmed text messages</li> <li>• Use the scroll button to scroll until the desired message is highlighted then press the select button</li> <li>• Once completed, press the select button to confirm &amp; select the send option, then select contact list</li> <li>• Use the scroll button to scroll to the desired contact &amp; press the select button to send</li> </ul>
<p><b>Transmitting Voice Calls</b></p> <ul style="list-style-type: none"> <li>• To initiate a transmission hold the Push to Talk (PTT) Button</li> <li>• Once you press the PTT Button, the radio will emit a talk permit chirp</li> <li>• This talk permit chirp signals that you can begin to speak</li> <li>• When done speaking release the PTT Button</li> <li>• For a set period of time the system resources are held to allow immediate responses</li> <li>• If there is no response within this period the system will be released signaled by a call ended chirp</li> </ul>	<p><b>Transmitting Voice Calls Out of Talkgroup</b></p> <ul style="list-style-type: none"> <li>• To call outside your talkgroup press the contact list button to bring the list on the screen</li> <li>• Use the scroll button to highlight the desired contact</li> <li>• Press the PTT Button &amp; you will transmit on the selected contact's talkgroup</li> <li>• The radio will stay on the selected group until a set time of inactivity or canceled via the home button</li> </ul>
<p><b>Receiving Voice Calls</b></p> <ul style="list-style-type: none"> <li>• Portables automatically receive transmissions on the Talkgroup</li> <li>• When receiving the screen will display the Talkgroup &amp; the Radio ID / Alias of the transmitting unit</li> </ul>	<p><b>Channel Controls</b></p> <ul style="list-style-type: none"> <li>• There are        zones</li> <li>• Each zone has        channels programmed</li> <li>• To switch zones</li> <li>• To switch channels Turn the Channel Knob</li> </ul>

# Custom Programming

## Zone

Channel	Name	Channel	Name

## Zone

Channel	Name	Channel	Name

## Zone

Channel	Name	Channel	Name

## Zone

Channel	Name	Channel	Name

## Zone

Channel	Name	Channel	Name

## Zone

Channel	Name	Channel	Name

## Zone

Channel	Name	Channel	Name

## Zone

Channel	Name	Channel	Name

For additional support please contact your local dealer.

Your Local Dealer